

### **Tank - Gravity Dispensing Option**

1. All previous standards for truck or trailer mounted tanks apply.
2. Hard piping and valves will not extend beyond IBC perimeter.
3. Locate tank such that gravity dispensing valve is easily accessible.
4. Fusible link valve to be installed as close as possible to tank shutoff valve and within tank perimeter.
5. Hose must be removed and secured with or on a rack, reel, straps, or similar retaining device while in transit.