


STREAM BANK PROFILE VIEW

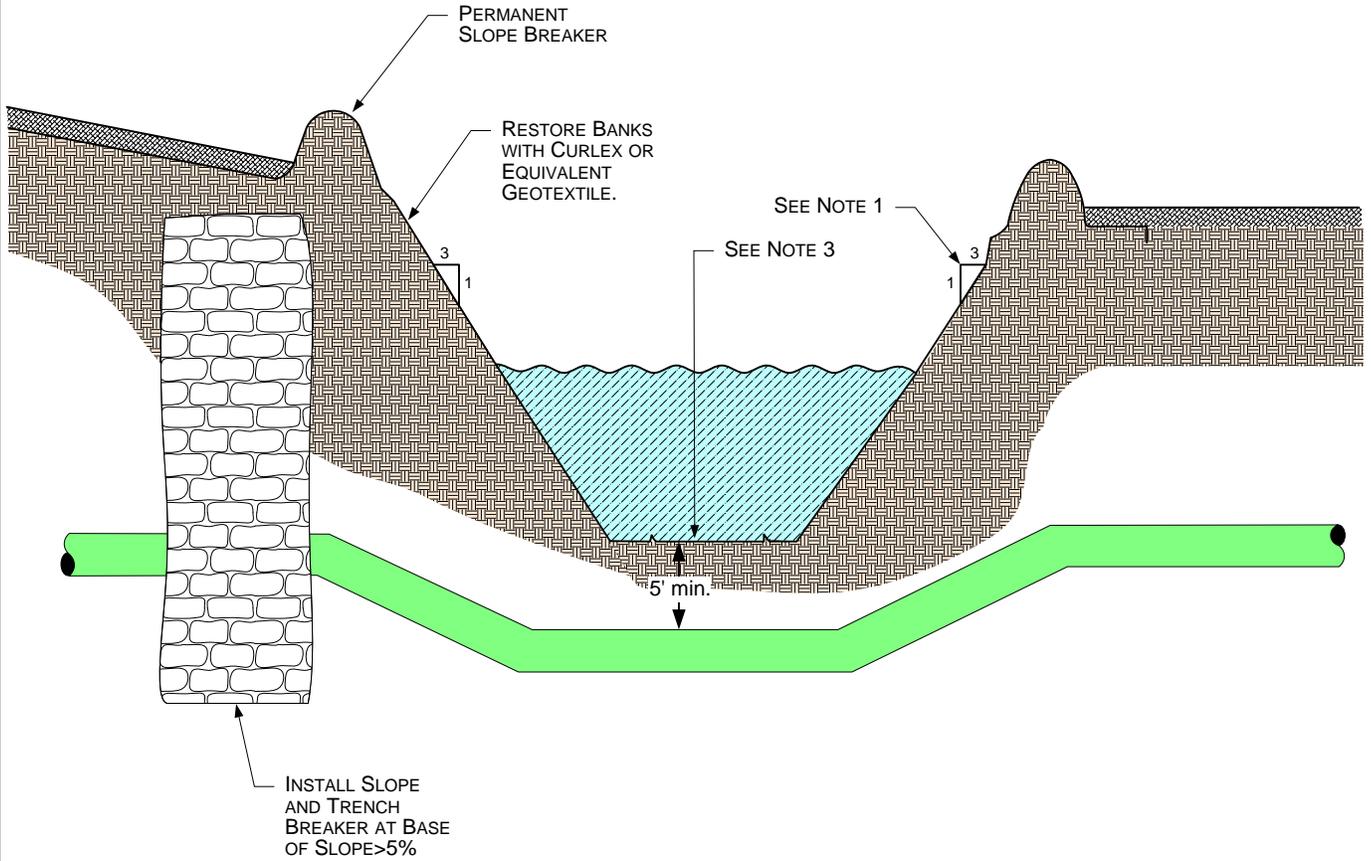

NOTES:

1. MATCH SLOPES AS CLOSE AS POSSIBLE TO ADJACENT ROW.
2. ROW WILL BE REDUCED TO 75' WHEN INCISED BANKS HAVE A DEPTH GREATER THAN 20'.
3. TO REDUCE BOTTOM SCOUR, CLEAN GRAVEL OR NATIVE COBBLE WILL BE PLACED IN THE UPPER 1 FOOT OF TRENCH BACKFILL.

For environmental review purposes only.




Typical Incised Bank Stabilization Restoration Plan

Page 1 of 2

DATE: 10/13/2004
REVISED: 12/13/2006
SCALE: 1" = 20'
DRAWN BY: KJAnderson
K:\366\060\STREAM_BANK_2.VSD

STREAM BANK PLAN VIEW

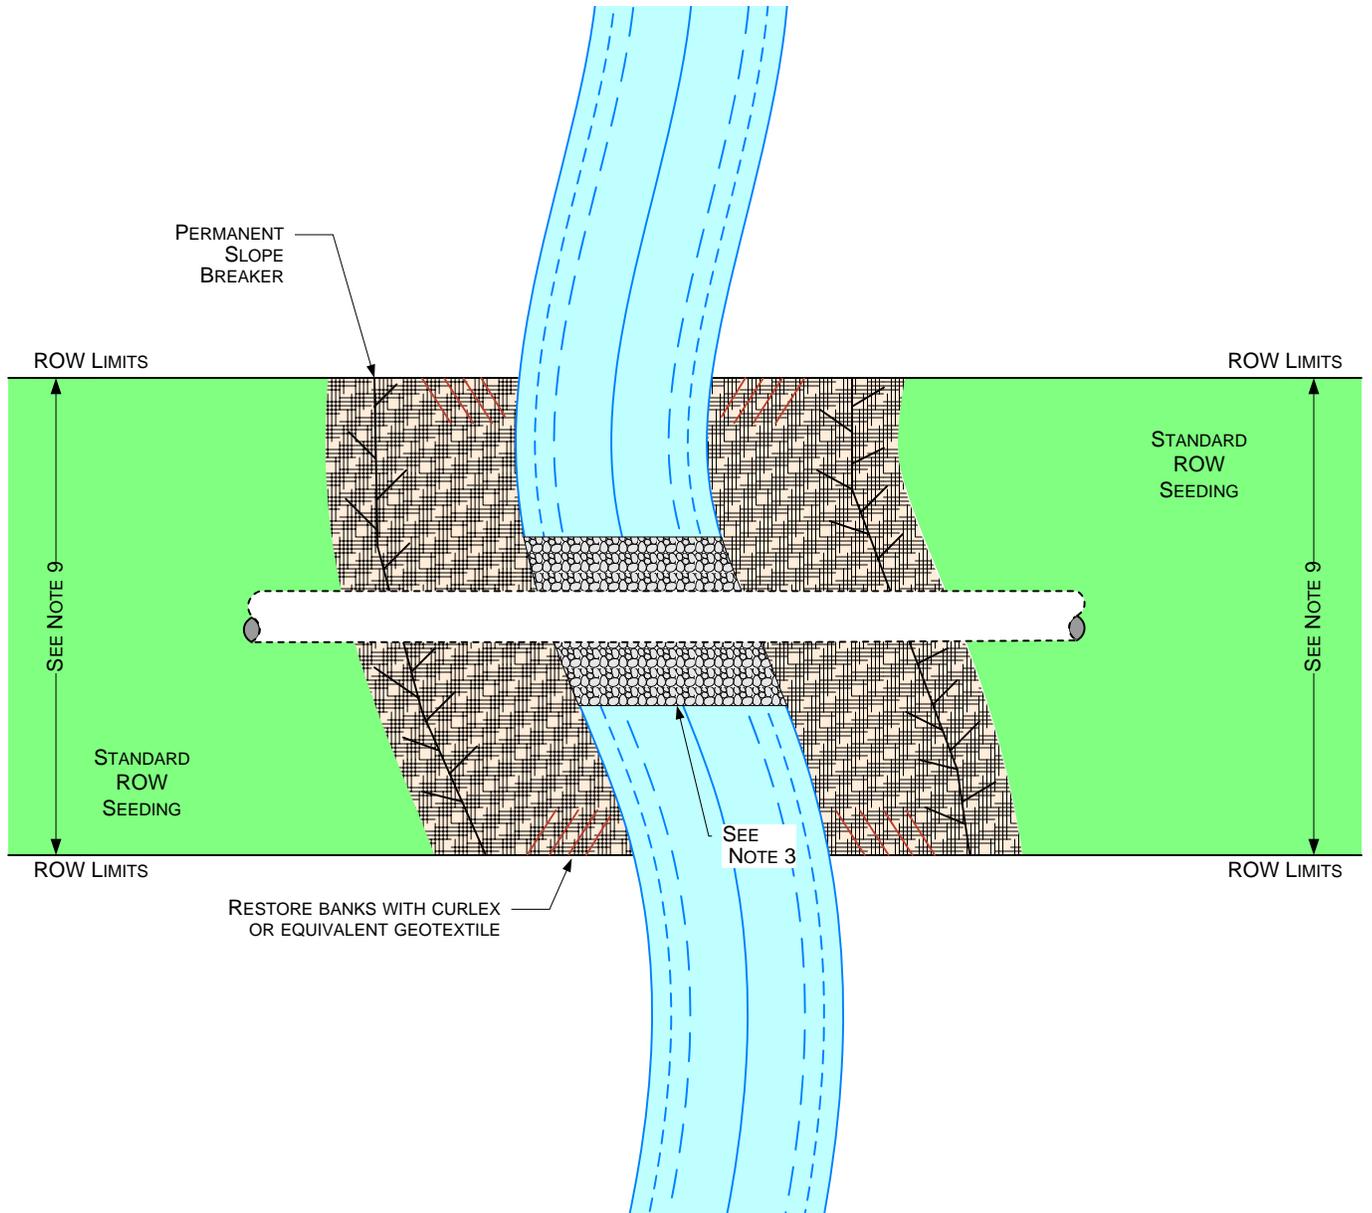

For environmental review purposes only.



Typical Incised Bank Stabilization Restoration Plan

Page 2 of 2

DATE: 10/13/2004

REVISED: 12/13/2006

SCALE: RNTS URCE

DRAWN BY: KJAnderson

K:\366\060\STREAM_BANK_2.VSD